


**SUSHI****IMPORTANTE**

1) Effettuare il procedimento di memorizzazione lontano da possibili sorgenti di interferenza a radio frequenza (es. cellulari).

2) Le batterie del telecomando originale devono essere cariche.

In caso di batterie non completamente cariche provvedere alla sostituzione prima della duplicazione.

MEMORIZZAZIONE

 
<p>1- Tenere premuto il tasto 1 e contemporaneamente premere il tasto 4 per 3 volte (LED lampeggiante rosso veloce).</p>		<p>2- Rilasciare entrambi i tasti</p>	
<p>3- Premere e rilasciare il tasto dove si vuole memorizzare il codice (es. tasto 1) (LED acceso fisso in rosso)</p>		<p>4- Posizionare il telecomando Originale a circa 0,5cm dal BRAVO e tenere premuto il tasto del telecomando Originale fino a che il LED emette 3 lunghi lampeggi verdi.</p>	

NB: Dopo 5 secondi il led emetterà nuovamente un lampeggio rosso veloce.

Per duplicare un altro codice ripetere la procedura dai punti 3 e 4 prima della fine del lampeggio altrimenti ripetere dal punto 1.

Posizionamento telecomandi


L'antenna trasmittente potrebbe essere situata in varie posizioni, quindi, in caso di problemi durante la duplicazione, variare la posizione del telecomando originale.

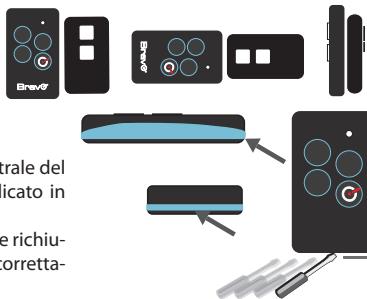**Sostituzione batteria**

Per sostituire le batterie, agire con delicatezza nella parte centrale del bordo inferiore del radiocomando con un giravite come indicato in figura.

Separare la base dal coperchio superiore, sostituire le batterie e richiudere facendo attenzione che base e coperchio si incastrino correttamente.

Conforme alle disposizioni stabilite dalle direttive 2014/53/UE, RoHS e REACH per copia dichiarazione contattare la Europe net.

 Il prodotto non deve essere gettato nei rifiuti domestici, deve essere smaltito presso uno dei punti di raccolta indicati dalle autorità locali.

Attenzione:

- Le batterie possono perdere liquidi corrosivi e/o infiammabili o esplodere causando danni a persone o cose.
- Sostituire la batteria esaurita immediatamente
- Tenere le batterie lontano dai bambini - Non ingerire - Non smontare
- Smaltire le batterie presso i punti di raccolta autorizzati

Batteria: 1x3V CR 2032

Frequenza: 433/868MHz

IP x4

Europe net - Via della Palmarola, 64 - Roma - Tel: 06-30944097








 
SUSHI



IMPORTANT

- 1) Perform the memorization procedure far from possible sources of radio frequency interference (e.g. mobile phones).
 - 2) The batteries of the original remote control must be charged.
- If the batteries are not fully charged, replace them before duplication.

 
DUPLICATION

<p>1- Hold down button 1 and simultaneously press button 4 for 3 times (LED flashing red fast).</p>		<p>2- Release both keys</p>	
<p>3- Press and release the button where you wish to store the code (e.g. button 1) (LED steady red)</p>		<p>4- Position the original remote control at a distance of about 0.5cm from the BRAVO and hold down the button of the original remote control until the LED flashes 3 long green flashes.</p>	

NB: After 5 seconds the LED will flash red again quickly. To duplicate another code repeat the procedure from points 3 and 4 before the end of the flashing otherwise repeat from point 1.

Remote control positioning

The transmitter antenna may be located in various positions, so if problems occur during duplication, vary the position of the original remote control.

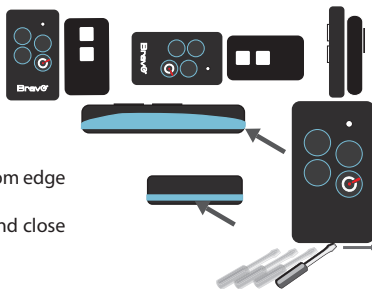


Replacing the battery

To replace the batteries, gently work in the middle of the bottom edge of the remote control with a screwdriver as shown.

Separate the base from the top cover, replace the batteries and close again, ensuring that the base and cover fit together correctly.

Complies with the provisions of the directives 2014/53/EU, RoHS and REACH for a copy of the declaration contact Europe net.

 The product must not be disposed of with household waste, it must be disposed of at a collection point designated by the local authorities.

Caution:

- Batteries may leak corrosive and/or flammable liquids or explode causing injury to persons or damage to property.
- Replace exhausted battery immediately
- Keep batteries away from children - Do not ingest - Do not dismantle
- Dispose of the battery at an authorised collection point.

Battery: 1x3V CR 2032

Frequency: 433/868MHz

IP x4

Europe net - Via della Palmarola, 64 - Roma

